

David L. Huffman **Engineering Note**

Date: March 12, 2004 Rev Date:	
Project: Doc. No:	Minos LVPS System H20040312
Subject:	Checkout and Limits Set
	fy that the crate is okay for power-up. Look for such things as loose connections, missing cables and disconnec cards installed in the crate.
Con	nect the AC power to the supply. The front panel should go through the inititalization process.
Turr	the supply ON using the front panel switch. Verify the supply is operating correctly.
Turr	OFF and remove the front panel of the Wiener. Unplug the 9 pin 'D' connector and stow the panel in a safe e.
	nect the special cable to the PC and the socket where the front panel was removed. Start the PC program 26000.
	ust the settings as indicated by the settings sheet for the particular supply selected. Either a Master or a Minder . (following pages)
Turr	the supply ON by clicking the POWER ON/POWER OFF line. Verify correct operation.
Mak	te any fine adjustments to the voltage reads as deamed necessary to obtain the correct output voltage.
Turr	the supply OFF and reconnect the front panel. Disconnect the AC power and replace the front panel.
$\square_{ m Mak}$	te note of which supply has had this adjustment.



